# SIRUBA

零件圖 PARTS LIST

PK511






# CONTENTS

- 1. BUTTON CLAMP MECHANISM COMPONENTS
- 2. MACHINE ARM & MISCELLANEOUS COVERS COMPONENTS
- 3. LOOPER SHAFT MECHANISM COMPONENTS
- 4. NIPPER & THREAD HANDLING PARTS COMPONENTS
- 5. FEED PLATE COMPONENTS
- 6. BUTTON CLAMP LIFTER COMPONENTS
- 7. NEEDLE DRIVING PULLEY SHAFT MECHANISM COMPONENTS
- 8. NEEDLE BAR DRIVING MECHANISM COMPONENTS
- 9. STOP MOTION MECHANISM COMPONENTS
- 10. STITCH SELECTING PARTS COMPONENTS


#### 1. BUTTON CLAMP MECHANISM COMPONENTS

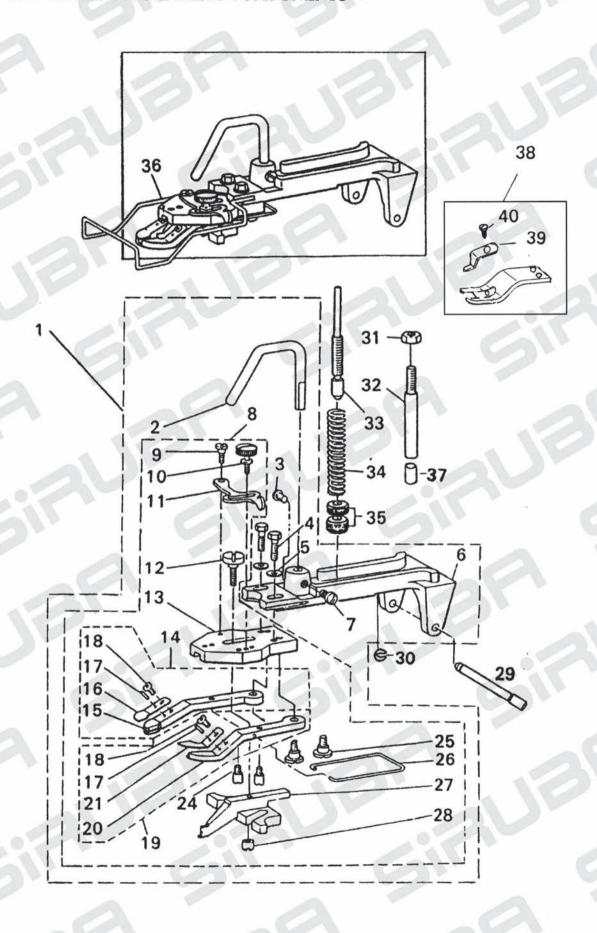

Part No.	Description	Amt. Req.
B00101	FLAT BUTTON CLAMP ASM.	
B00102	BUTTON CLAMP LIFTING ROD	
B00103	SCREW 15/64-28 L=9	1
B00104	SCREW 3/16-32 L=13.5	2
		2
		1
		1 1
	JAWLEVER HOLDER ASM.	1
		1
		1
		1
		!
	BUTTON CLAMP LOCATING PIN	1
William - 152750"	SCREW 9/64-40 L=3.5	2
B00119		î
B00120	BUTTON CLAMP JAW, RIGHT	. O Ti
B00121		
		ó
		0
		2
B00125	HINGE SCREW D=6.35 H=3.9	2
B00126	BUTTON CLAMP SPRING	1
		10
		1
		1
		1
		1 6
B00135	THREAD TENSION STUD NUT	2
		1
B00137		1
B00138		i
B00139	SPRING	1_0
B00140	SCREW 3/32-56 L=4	
	B00101 B00102 B00103 B00104 B00105 B00106 B00107 B00108 B00109 B00110 B00111 B00112 B00113 B00114 B00115 B00116 B00117 B00118 B00119 B00120 B00121 B00121 B00121 B00123 B00123 B00133 B00134 B00135 B00136 B00137 B00138	BOO101


Jara

# 2. MACHINE ARM & MISCELLANEOUS COVERS COMPONENTS

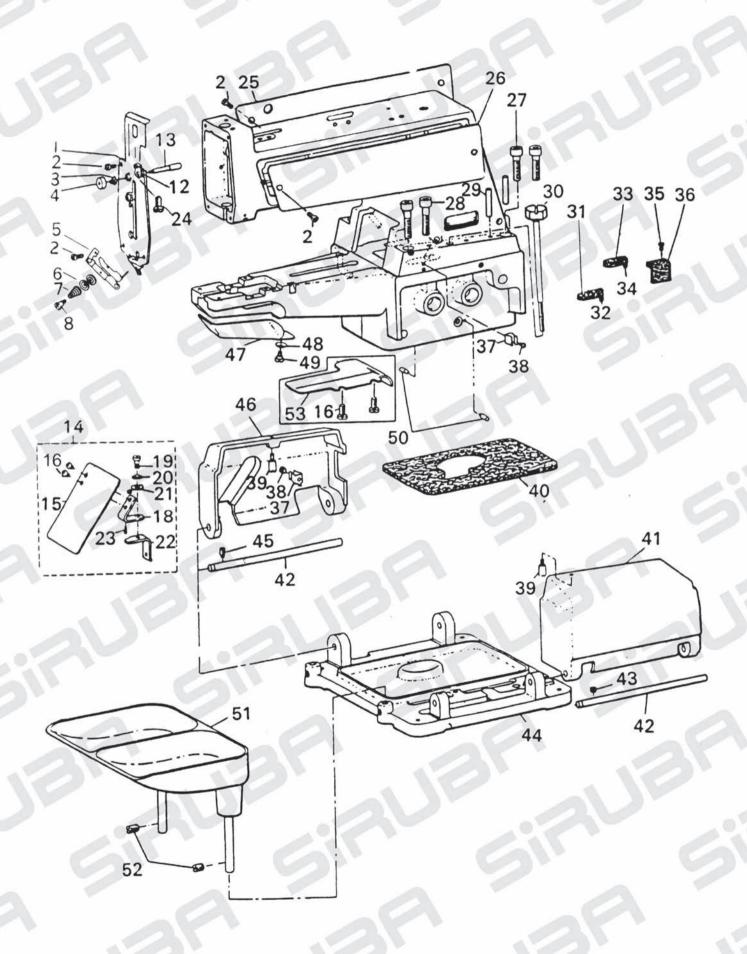


	Part No.	Description	Amt. Req.
1	B00201	FRONT COVER ASM.	
2	B00202	SCREW 3/16-28 L=8	8
3	B00203	TENSION SPRING	1
4	B00204	NIPPER RELEASING PLUNGER THUMB NUT	1
5	B00205	THREAD TENSION GUIDE ASM.	1
6	B00206	TENSION DISC	2
7	B00207	TENSION SPRING	1
8	B00208	E-SHAPED SNAP RING	1
===			0
1			0
			0
12	B00212	THREAD GUIDE	
13 14	B00213 B00214	NIPPER RELEASING PLUNGER SAFETY PLATE ASM.	
15	B00214	SAFETY PLATE	
			<del></del>
16	B00216	SCREW 11/64-40 L=7	4
17 18	B00218	SAFETY PLATE INSTALLING PLATE	0
19	B00218	HINGE SCREW D=6 H=4	0.01
20	B00220	DISC SPRING	
21	B00221	WASHER	
22	B00221	SAFETY PLATE MOUNTING BASE	1
23	B00223	SPRING PIN	1
24	B00224	SCREW	1
25	B00225	SIDE COVER, LEFT	1
26	B00226	SIDE COVER, RIGHT	1
27	B00227	SCREW M8 L=30	2
28	B00228	SCREW M8 L=35	2
29	B00229	GUIDE PIN	2
30	B00230	SET SCREW ASM.	1
31	B00231	OIL FELT, LARGE	1
32	B00232	OIL WICK	1
33	B00233	OIL FELT, SMALL	
34 35	B00234 B00235	OIL WICK SCREW 9/64-40 L=8	
36	B00236	OIL SUPPLY FELT	1
37 38	B00237 B00238	SIDE COVER SPRING SCREW 9/64-40 L=7	2 2
39	B00239	SCREW 5704-40 L=7	2
40	B00240	OIL DRIP FELT	Jaki I
41	B00241	SIDE COVER, RIGHT	
42	B00241	SIDE COVER, RIGHT SIDE COVER HINGER SHAFT	2
43	B00243	SCREW 15/64-28 L=5	ĩ
44	B00244	MACHINE SUB-BASE	1
45	B00245	SCREW 15/64-28 L=8	1
46	B00246	SIDE COVER, LEFT	1
47	B00247	LOOPER COVER	
48	B00248	SPRING WASHER	1
49	B00249	HINGE SCREW D=6 H=2.7	1
50	B00250	CAM INDICATING PIN	2
51	B00251	BUTTON TRAY ASM.	1
52	B00252	SCREW 15/64-28 L=5	

#### 3. LOOPER SHAFT MECHANISM COMPONENTS

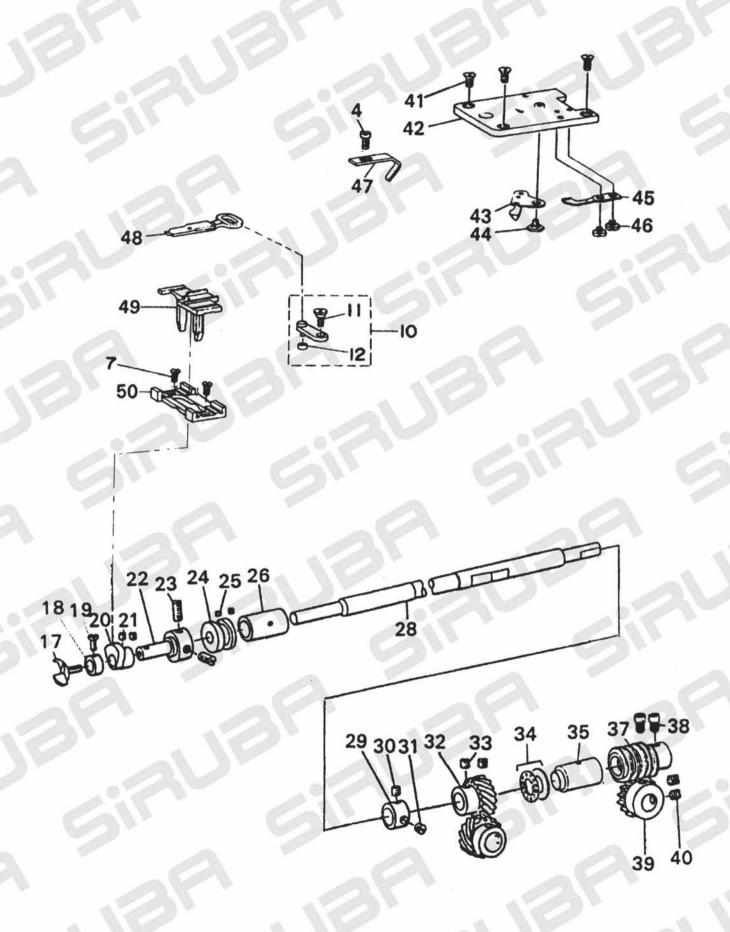


	Part No.	Description	Amt. Req.
1 2 3 4 5	воо 304	SCREW 11/64-40 L=7.8	0 0 0 1
6 7 8	B00307	SCREW 11/64-40 L=7	0 2 0
10	B00310	LOOP POSITIONING FINGER LEVER	0
11 12 17 18 19 20	B00311 B00312 B00317 B00318 B00319 B00320	HINGE SCREW D=6.35 H=2.4 LOOPER POSITIONING FINGER LEVER ROLL LOOPER THRUST COLLAR SCREW 9/64-40 L=6.1 LOOP POSITIONING FINGER CAM	
21 22 23 24 25	B00321 B00322 B00323 B00324 B00325	SCREW 11/64-40 L=3.5 LOOPER & CAM SLEEVE SCREW 15/64-28 L=4 LOOP POSITIONING FINGER SCREW 11/64-40 L=2.8	2 1 2 1 2
26 27 28 29 30	B00326 B00328 B00329 B00330	LOOPER SHAFT BUSHING, FRONT  LOOPER SHAFT THRUST COLLAR SCREW 15/64-28 L=4	1 0 1 1
31 32 33 34 35	B00331 B00332 B00333 B00334 B00335	SCREW 15/64-28 L=4 LOOPER SHAFT DRIVEN GEAR SCREW 1/4-40 L=6 THRUST BALL BEARING LOOPER SHAFT BUSHING, REAR	1 1 2 1
36 37 38 39 40	B00337 B00338 B00339 B00340	DRIVEN WORM SCREW 1/4-40 L=7 CAM SHAFT DRIVEN GEAR SCREW 1/4-40 L=6	0 1 2 1 2
41 42 43 44 45	B00341 B00342 B00343 B00344 B00345	SCREW 11/64-40 L=8.5 THROAT PLATE MOVING KNIFE HINGE SCREW D=6 H=0.85 COUNTER KNIFE	3 1 1 1
46 47 48 49 50	B00346 B00347 B00348 B00349 B00350	SCREW 1/8-44 L=3 NEEDLE GUARD YOKE SLIDE POSITIONING FINGER YOKE SLIDE YOKE SLIDE INSERT	2 1 1 1

#### 4. NIPPER & THREAD HANDLING PARTS COMPONENTS

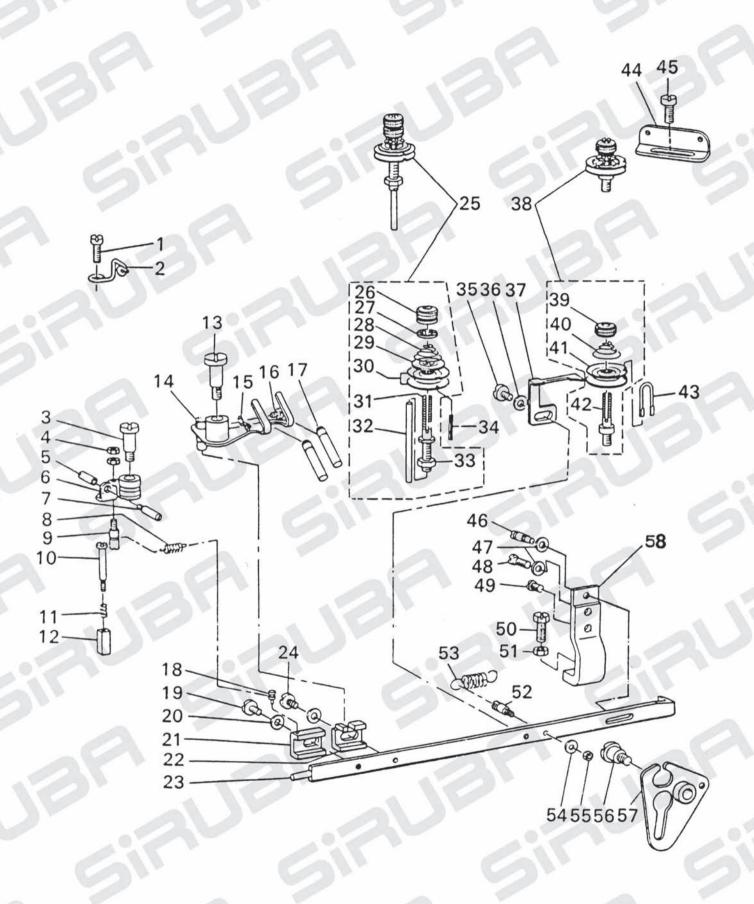


		Part No.	Description Amt. Req.
	1	B00401	SCREW 15/64-28 L=12
	2	B00402	THREAD GUIDE
	3	B00403 B00404	HINGE SCREW D=7.94 H=12.7
	5	B00404	NUT 2 NUT 1
	6	B00406	THREAD NIPPER 1
	7	B00407	THREAD RIFFER THREAD RELEASING SCREW STUD
	8	B00408	NIPPER BAR BLOCK SPRING 1
	9	B00409	NIPPER BAR BLOCK SPRING SCREW
	10	B00410	SCREW D=4 H=20 1
	11	B00411	NIPPER BLOCK SPRING
	12 13	B00412 B00413	NIPPER BLOCK  HINGE SCREW D=7.94 H=15  1
	14	B00414	THREAD PULL-OFF LEVER
	15	B00415	THREAD GUIDE 1
1	16	B00416	SCREW 9/64-40 L=4.6
	17	B00417	THREAD GUIDE 2
	18	B00418 B00419	NIPPER BAR BLOCK SPRING PIN  SCREW 3/16-28 L=9  1
	20	B00419	WASHER 2
	21	B00421	NIPPER BAR BLOCK 1
	22	B00421	NIPPER BAR BLOCK REAR 1
	23	B00423	NIPPER BAR 1
	24	B00424	SCREW 3/16-28 L=9
	25	B00425	TENSION POST ASM.
	26 27	B00426 B00427	TENSION NUT 1 TENSION DISC STOPPER 1
	28	B00427	TENSION BISC STOFFER TENSION SPRING
	29	B00429	TENSION DISC HOLDER 1
	30	B00430	TENSION DISC . 2
	31	B00431	TENSION POST
	32	B00432 B00433	TENSION RELEASE PIN 1 NUT 1
	34	B00434	SPRING PIN 1
	35	B00435	SCREW 3/16-28 L=9
	36	В00436	WASHER 1
	37	B00437	THREAD TENSION RELEASING LEVER
	38	B00438 B00439	THREAD TENSION ASM. THREAD TENSION STUD NUT
	39	B00439	TENSION SPRING
	41	B00441	TENSION DISC 2
	42	B00447	THREAD TENSION STAFF 1
	43	B00443	THREAD GUIDE
	44	B00444 B00445	THREAD GUIDE 1 SCREW 15/64-28 L=12 1
	45		
	46	B00446 B00447	ADJUSTING SCREW 1 WASHER 2
	48	B00447	SCREW 3/16-28 L=15.5
	49	B00449	SCREW 3/16-28 L=9.5
	50	B00450	BOLT 15/64-28 L=14
	51	B00451	NUT 1
	52 53	B00452 B00453	NIPPER BAR SPRING SCREW 1 NIPPER BAR SPRING 1
	54	B00454	WASHER 1
	55	B00455	NUT 1
	56	B00456	HINGE SCREW D=7.94 H=8
	57	B00457	NIPPER BAR ACTUATING LEVER 1
P8	58	B00458	NIPPER BAR BEARING BLOCK
F 0			

#### 5. FEED PLATE COMPONENTS

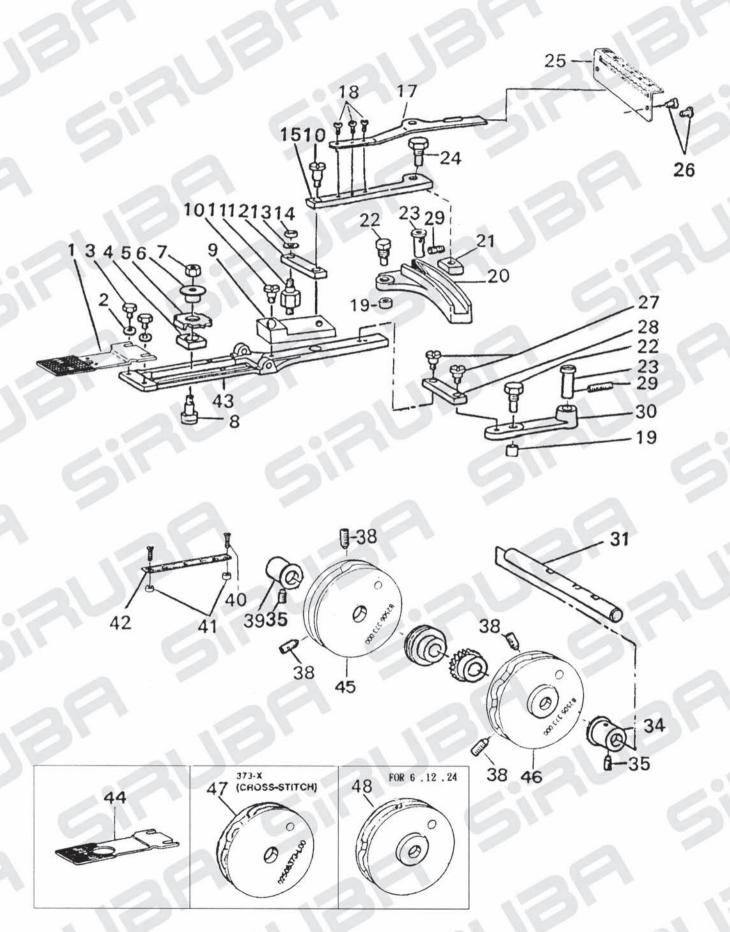


	No.	Description	Amt. Req.
1	B00501	FEED PLATE	1
2	B00502	WASHER	1 ,
3	B00503	SCREW 3/16-28 L=6	2
4			1
6			
8			
9	B00509		1
10	B00510	HINGE SCREW D=6.35 H=9.6	2
11	B00511	STUD M6-1.0 D=8.0	1
12	B00512	INTERMEDI CONNECTING LINK	1
		WASHER	1
			1
	B00515	INDICATOR SPRING CONNECTING LINK	1
	D00517		0
			1
			3
20			2
			- A-
			1
			2 2
24	B00524	CAM ROLL SCREW STUD	1
25	B00525	LENGTHWISE FEED GRADUATE PLATE	i
26	B00526	SCREW 3/16-28 L=6	2
27	B00527	HINGE SCREW D=6.35 H=4.8	2
			2
			1
			1
31	B00531	CAM SHAFT	1
			0
34	B00 534	CAM SHAFT RUSHING RIGHT	1
35			2
			<del>-</del>
38	B00538		5
39	B00539	CAM SHAFT BUSHING, LEFT	í
\ <del></del>	B00540	SCREW M2.5x8	2
41	B00541	CROSSWISE FEED GRADUATED PLATE WASHER	2
		CROSSWISE FEED GRADUATED PLATE	1
45	B00544	FEED PLATE (373) LENGTHWISE FEED CAM (373)	2 !
46			
410	B00546	CROSSWISE FEED CAM (373)	
	DOOM! O		
47 48	B00547 B00548	CROSSWISE FEED CAM (373-X) CROSSWISE FEED CAM (6,12,24)	
	10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 33 33 34 35 36 37 38 39 40 41 42 43 44 44 44 45 46 46 47 47 47 47 47 47 47 47 47 47	No.   B00501	No.   Description

#### 6. BUTTON CLAMP LIFTER COMPONENTS

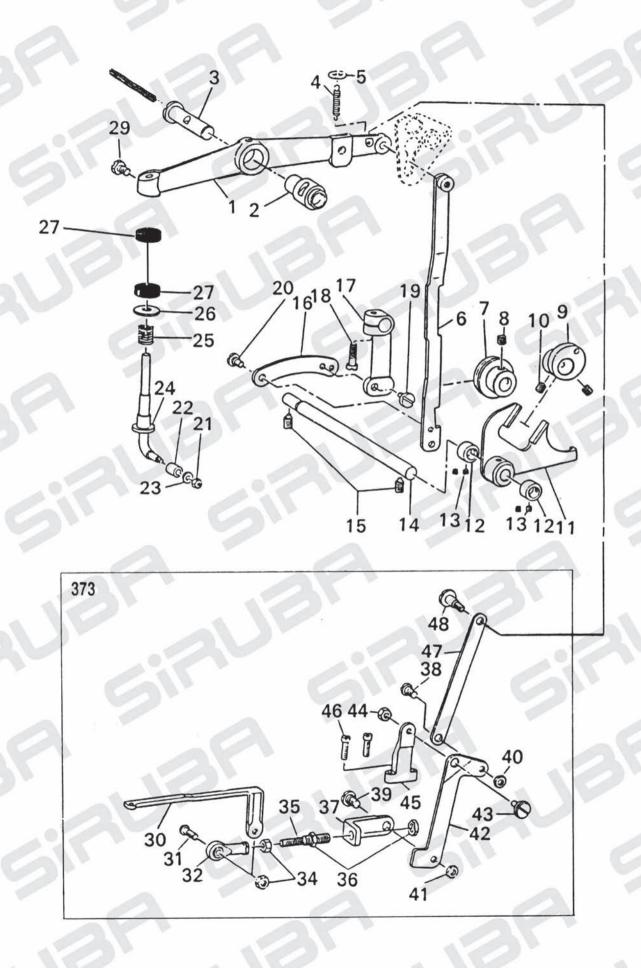

	Part No.	Description	Amt. Req.
1	B00601	BUTTON CLAMP LIFTING LEVER	1
2	B00602	BUSHING	1
3	B00603	BUTTON CLAMP LIFTING LEVER SHAFT	1
4	B00604	NIPPER BAR ACTUATING LEVER SPRINC	1
5	В00605	WASHER	1
6	B00606	BUTTON CLAMP LIFTING LINK	1
7 8	B00607 B00608	SLIDING ROLLER SCREW 15/64-28 L=5	1
9	B00609	ECCENTRIC CAM	1
10	B00610	SCREW 1/4-40 L=6	2
11	B00611	BUTTON CLAMP LIFTING	1
12	B00612	THRUST COLLAR	2
13	B00613	SCREW 11/64-40 L=3.5	4
14	B00614	LEVER SHAFT	1
15	B00615	SCREW 15/64-28 L=10.5	2
16	B00616	LIFTING LINK CONNECTING LINK	1
17 18	B00617 B00618	LIFTING LINK LEVER SCREW 3/16-28 L=15	A N
19	B00619	HINGE SCREW M5-0.8 L=8	
20	B00620	HINGE SCREW D=6.35 H=2.1	X i
21	B00621	NUT	1
22	B00622	BUTTON CLAMP LIFTING ROD ROLL	1
23	B00623	WASHER	1.4
24	B00624	BUTTON CLAMP LIFTING ROD	1
25	B00625	SPRING	1
26	B00626	WASHER	3
27 28	B00627	CUSHION	2
29	B00629	SCREW 15/64-28 L=11	1
30	B00630	CONNECTING LINK, FRONT	i
31	B00631	JOINT STUD M5-0.8X16	1
32	B00632	FEED ADJUSTING JOINT	1
33	poo (al-	7 THE	0
34 35	B00634 B00635	NUT CONNECTING SCREW	2
36	B00636	NUT 15/64-24	
37	B00636	CONNECTING LINK, REAR	2
38	B00638	HINGE SCREW M6-1.0 D=8.0 H=3.2	1
39	B00639	HINGE SCREW M6-1.0 D=8.0 H=3.2	1
40	воо640	NUT M6-1.0	1
41	B00641	NUT M6-1.0	1
42	B00642	THREAD TRIMMING LINK	1
43	B00643	HINGE SCREW M6-1.0 D=8.0 H=3.2	1
44	B00644	NUT M6-1.0	1
45	B00645	THREAD TRIM LEVER BASE	_1
46 47	B00646	SCREW 11/64-40 L=14	2
47	B00647 B00648	THREAD TRIMMING LINK HINGE SCREW D=6.35 H=13.2	
413	D00040	HINGE SOREW DEC. )) HEID. 2	-


### 7. NEEDLE DRIVING PULLEY SHAFT MECHANISM COMPONENTS

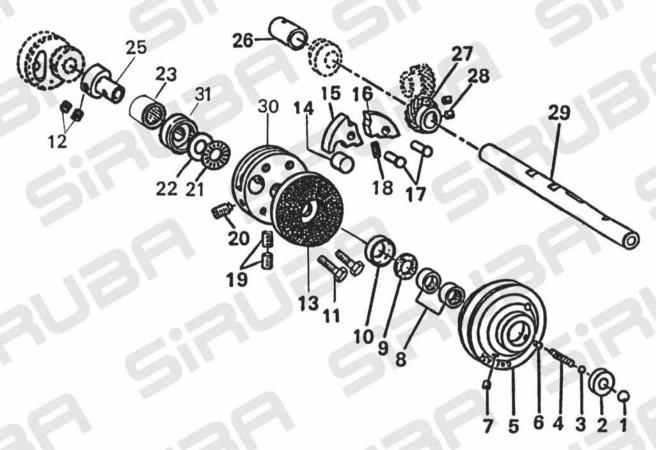

	Part No.	Description	Amt. Req.
1	B00701	BALL LARGE	1
2	B00702	PULLEY INSERT	1
3	B00703	BALL SMALL	1
4	B00704	SPRING	1
5	B00705	NEEDLE DRIVING PULLEY	1
6	В00706	SCREW 11/64-40 L=6.5	1
7	B00707	SCREW 15/64-28 L=4	1
8	B00708	NEEDLE BEARING	2
9	B00709	GREASE RETAINING WICK	1.
10	B00710	RETAINING WASHER	1
11	B00711	SCREW 15/64-28 L=23.5	2
12	B00712	SCREW 15/64-28 L=5	2
13	B00713	NEEDLE DRIVING PULLEY CLUTCH DISC	1
14	B00714	SEAL PLUG	1
15	B00715	STOP MOTION DISC PAWL	i i
16	B00716	STOP MOTION DISC LATCH	1
17	B00717	SCREW D=6.35 H=16	2
18	B00718	SPRING	1
19	B00719	SCREW 5/16-24 L=10	2
20	B00720	SCREW 5/16-24 L=17	2 2
21	B00721	THRUST BALL BEARING	1
22	B00722	ECCENTRIC WASHER	1 = (
23	B00723	NEEDLE BEARING	1
24			0
25	B00725	LOOPER & CAM SLEEVE	1
26	B00726	PULLEY SHAFT BUSHING, LEFT	1
27	B00727	DRI ING GEAR	
28	B00728	SCRE 1/4-40 L=6	2
29	B00729	NEEDLE DRIVING PU EY SHAFT	1 4
30	B00730	STOP MOTION DISC	1
31	B00731	TALLOW COVER	1 p.
			P1


D13

# 8. NEEDLE BAR DRIVING MECHANISM COMPONENTS

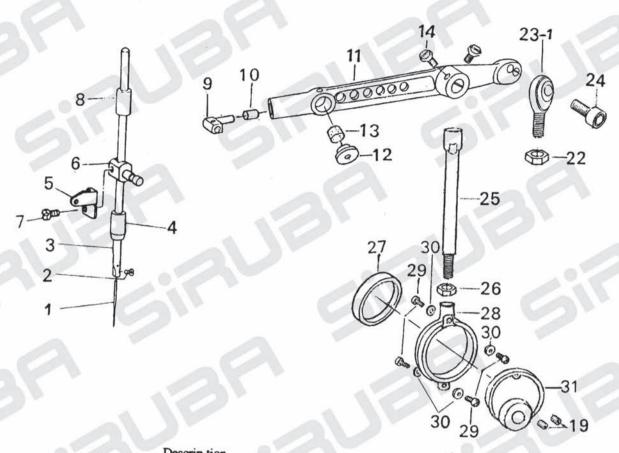


	No.	Descrip tion	Req.
1	B00801	NEEDLE	1
2	B00802	SCREW 1/8-44 L=4.5	1
3	B00803	NEEDLE BAR	î
4	B00804	NEEDLE BAR BUSHING, LOWER	1
5	B00805	NEEDLE BAR BALANCE	1
6	B00806	NEEDLE BAR CLAMP	1
7	B00807	SCREW 9 / 64 - 40 L=12	_1
8	B00808	NEEDLE BAR BUSHING, UPPER	1
9	B00809	NEEDLE BAR BEARING BLOCK	1
10	B00810	BUSHING	1
11	B00811	NEEDLE BAR LEVER	1
12	B00812	SEAL PLUG	1
13	B00813	OIL FELT	î i
14	B00814	SCREW 15 / 64 - 28 L=15.5	2
19	B00819	SCREW 1/4-40 L=6	2
22	B00822	NUT - M8	1
23-1	B00823	BALL BEARING	1
24	B00824	SCREW 9/32-28 L=20	1
25	B00825	CRANK ROD	1
26	B00826	NUT - M7	î 📶
27	B00827	BEARING	1
28	B00828	CRANK	i
29	B00829	SCREW M3 - 0.5 * 4	O
30	B00830	WASHER	4
31	B00831	ECCENTRIC CAM	1

# 9. STOP MOTION MECHANISM COMPONENTS

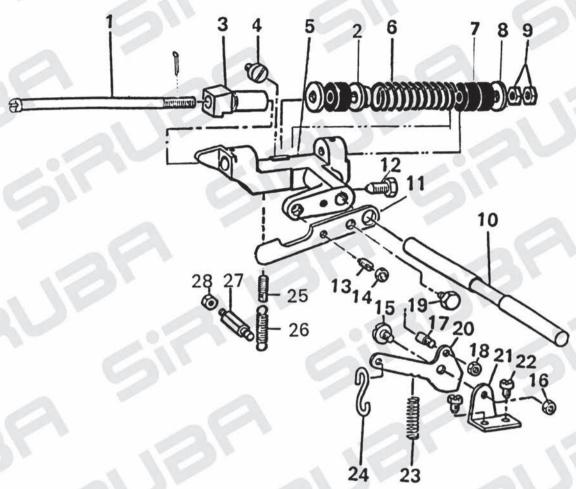


	Part No.	Description	Amt. Req.
1	B00901	STOP MOTION PLUNGER ROD	1
2	B00902	SEAL PLUG	!
3	воо 903	STOP MOTION PLUNGER	
4	воо904	SCREW 15/64-28 L=10	
5	B00905	STOP MOTION PLUNGER LEVER	4 4 1
6	воо906	STOP MOTION DISC SPRING	1
7	B00907	RUBBER CUSHION	4
8	B00908	WASHER	4
9	B00909	NUT	2
10	B00910	STOP MOTION LEVER SHAFT	0.1
11	B00911	STOP MOTION DISC PRESSURE LEVER	1
12	B00912	SCREW 5/16-18 L= 20	1
13	B00913	SCREW 15/64-28 L=15	1
14	B00914	NUT	1
15	B00915	HINGE SCREW D=8.0 H=3.0	11
16	воо916	NUT	- 10
17	B00917	STOP SCREW	1.0
18	B00918	NUT	4 11
19	B00919	SCREW 15/64-28 L=10.5	1
20	B00920	STOP MOTION TRIP LEVER	1
21	B00921	STOP MOTION TRIP LEVER BRACKET	1
22	B00922	SCREW 15/64-28 L=15	2
23	B00923	SPRING	1
24	B00924	S SHAPED HOOK	1
25	B00925	SPRING HANGER M6-1.0 L=21	1
26	B00926	STOP MOTION LEVER SPRING	1
27	B00927	SCREW STUD	1
28	B00928	NUT	1
~~	200723		

#### 10. STITCH SELECTING PARTS COMPONENTS

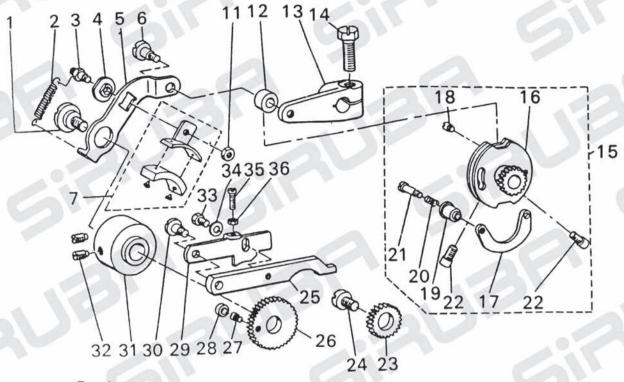

	Part No.	Description	Amt. Req.
1 2 3 4 5	B01001 B01002 B01003 B01004 B01005	HINGE SCREW D=12.7 H=3.2 SPRING FRICTION PLATE ROTATING STUD SLIDE BLOCK SPEED SLOWING LEVER	1 1 1 1 1 1
6 7 8 9	B01006 B01007	HINGE SCREW D=7.94 H=13.3 FRICTION PLATE HOLDER ASM.	1 1 0 0
11 12 13 14 15	B01011 B01012 B01013 B01014 B01015	NUT STOP MOTION TRIPPING LEVER CAM ROLL STOP MOTION TRIPPING LEVER SCREW 5/16-18 L=24 STOP MOTION CAM ASM.	1
16 17 18 19 20	B01016 B01017 B01018 B01019 B01020	STOP MOTION CAM STOP MOTION CAM SHOE SCREW STOP MOTION CAM KNOB SPRING	
21 22 23 24 25	B01021 B01022 B01023 B01024 B01025	HINGE SCREW D=4.8 H=14.5 SCREW 15/64-28 L=10 STITCH SELECTING SPUR GEAR SCREW STUD STITCH SELECTING LEVER	1 2 1 1
26 27 28 29 30	B01026 B01027 B01028 B01029 B01030	STITCH SELECTING SPUR GEAR, LARGE SCREW ROLL STITCH SELECTING LATCH HINGE SCREW D=6.35 H=9.6	1
31 32 33 34 35 36	B01031 B01032 B01033 B01034 B01035	SPEED SLOWING FRICTION WHEEL SCREW 15/64-28 L=6 SCREW 11/64-40 L=10 WASHER SCREW 9/64-40 L=10 SCREW 9/64-40	1 2 1 1 1
0	BO 10 30	30REW 7/04-40	1

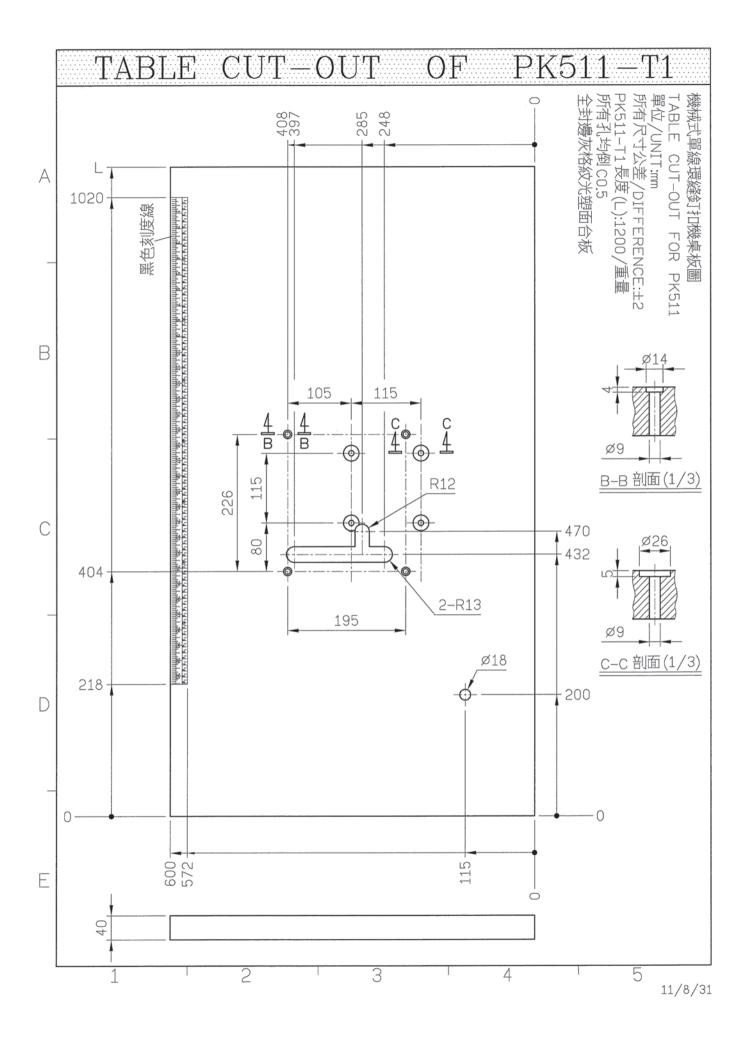





高林段仍有限公司 KAULIN MFG. CO., LTD.
由於對產品的改良更新,本產品零件圖及外觀的修改恕不事先通知!
The specification and/or appearances of the equipment described in this parts list are subject to change because of modification which will without previous notice.
GJ-05B05.JUN.2021